

Oil Burner Safety Control

For 1- or 2-stage oil power burners up to 30kg/h capacity and intermittent operations.

Flame detection:

- Photoresistor MZ 770 S
- Infrared-flicker detector IRD 1010.1
- UV solid state sensor UVD 970

APPLICATION RANGE

The TF 830.3 or TF 832.3 oil burner safety control boxes are suitable to control and monitor oil power burner up to 30 kg/h capacity (approved and certified according to EN230).


TYPES AVAILABLE

TF 830.3	1-stage operation post-ignition time ca. 20 sec. low voltage protection according to EN230
TF 832.3	2-stage operation post-ignition time 2-5 sec. low voltage protection according to EN230

CONSTRUCTIONAL FEATURES

The control box circuitry is protected by a flame resistant, transparent plastic housing. It incorporates the thermo-mechanical, temperature compensated timer, flame check and reset circuits.

Manual reset from lockout is provided by a push button with an integrated lockout signal lamp. A central fixing screw locks the control box to the wiring base. The wiring base and control box have a positive plug-in arrangement, making it impossible to achieve an incorrect connection between the two parts. A variety of cable entry points provides utmost flexibility of electrical wiring.



The TF 832.3 is fully compatible with the TF 730, 730-1 and TF 832.

An optional extension button (item no. 70601) compensates for height differences to the TF 730 series.



TECHNICAL DATA

Operating voltage	220/240 V (-15...+10%)
	50 Hz (40-60Hz)
Fuse rating	10 A fast, 6 A slow
Power consumption	ca. 5 VA
Max. load per output	
- terminal 3	1.5 A, cos φ 0.2
- terminal 4	4.0 A, cos φ 0.4
- terminal 5	0.5 A, cos φ 0.4
- terminal 6	0.5 A, cos φ 0.4
- terminal 7	0.1 A, cos φ 0.4
total load	5.0 A, cos φ 0.4
Pre-purge time	ca. 12 sec.
Pre-ignition time	ca. 12 sec.
Post-ignition time	TF 830.3 ca. 20 sec.
	TF 832.3 ca. 2-5 sec.
Delay time to oil valve 2	40 sec. (TF 832.3)
Lockout safety time	10 sec.
Reset time from lockout	ca. 90 sec.
Flame detector:	
MZ 770 S	side-on and end-on viewing
Light sensitivity MZ 770 S	> 6 Lux
IRD 1010.1	side-on or end-on viewing
UVD 970	end-on viewing
Sensor operating current	min. 30 µA
Weight incl. wiring base	0.25 kg
Mounting position	any
Protection class	IP44
Recommended ambient operating temperature for control and flame detector	0°C...+60°C
approved and certified according to European standards	EN 230

APPLICATION NOTES

1. Flame control

The following detectors can be used for flame control:

- For yellow oil flame: photoresistor MZ 770 S
- for blue or yellow flame: infrared-flicker detector type IRD 1010.1 or as alternative the UV solid state sensor UVD 970.

Using the photo resistor MZ 770 S, the no flame signal is generated at light levels below 3 Lux with respect to the operating cycle of the control. According to EN 230 stray light safety level has to be established in conjunction with the accompanying burner.

Connecting the IRD 1010.1 or the UVD 970, the correct wiring has to be observed.

2. Burner control

For burners without an oil solenoid valve, the burner motor has to be connected to terminal 5.

3. Low-voltage protection

The start up of the burner can only take place if the mains voltage is higher than a limit which is 15% below nominal value. If the voltage drops below 160V, a start-up is prevented or – without allowing to release the fuel – the control box goes into lock out mode.

4. Safety

The design and control sequence of the TF 830.3 and TF 832.3 control boxes comply with the currently applicable European standards and regulations.

6. Mounting and electrical wiring

Wiring base:

- 3 earth terminals with additional terminal for burner earthing
- 3 neutral terminals with internal permanent connection to neutral terminal 8
- 2 independant spare terminals (S1 and S2)
- 2 slide-in plates and 2 easy knock out holes plus 2 knock out holes in the base bottom facilitate the base wiring



Please note:

To assist trouble-free operation the main neutral connection terminal 8 in the wiring base must be fully tightened. The terminal screws are already in the undone position. To connect a wire to the terminal, the screw only needs to be fastened.

General:

- The control box can be mounted in any position. The protection class is IP44 (water spray tight). Neither the control box nor the flame detector should be subjected to excessive vibration.

COMMISSIONING AND ROUTINE CHECKS

1. Important notes

- The controls must be installed by qualified personnel only. The relevant national regulations have to be observed.
- On commissioning the wiring has to be carefully checked according the appropriate diagram, Incorrect wiring can damage the unit and endanger the installation.
- The fuse rating has to ensure that the limits specified in TECHNICAL DATA will not be exceed. If these precautions are not observed, the effect of a short circuit can cause severe damage to the control and installation.
- For safety reasons a minimum of one control shut-down per 24 hours has to be observed.
- Disconnect the mains before the control box is plugged in or out!
- The control box is a safety device and must not be opened!

2. Function control

For safety reasons the flame detection system should be tested on commissioning the installation as well as after a service or longer shut-down.

- a) Start-up with covered flame detector
 - After lock-out safety time is over the unit has to go in to lockout mode!
- b) Start-up with exposed flame detector:
 - After 20 sec. pre-purge time the unit has to go into lockout mode!
- c) Normal start-up with burner in the normal position, cover up the flame detector:
 - After start-up, and end of lock-out safety time the unit has to go into lockout mode!

3. Fault findings

Burner is not working:

- thermostat circuit open
- faulty electrical wiring
- mains voltage too low

Burner starts, but the flame does not establish, a lock out occurs:


- stray light on flame detector
- no ignition or no fuel
- mains voltage more than -15% below nominal value.

Burner starts, the flame establishes, but after the safety time, a lock out occurs:

- dirty or faulty flame detector
- insufficient light on detector
- sensitivity adjustment too low on IRD.

For a quick and safe diagnosis use the Satronic UP 940 burner test box.

CIRCUIT AND TIMING DIAGRAM TF 830.3

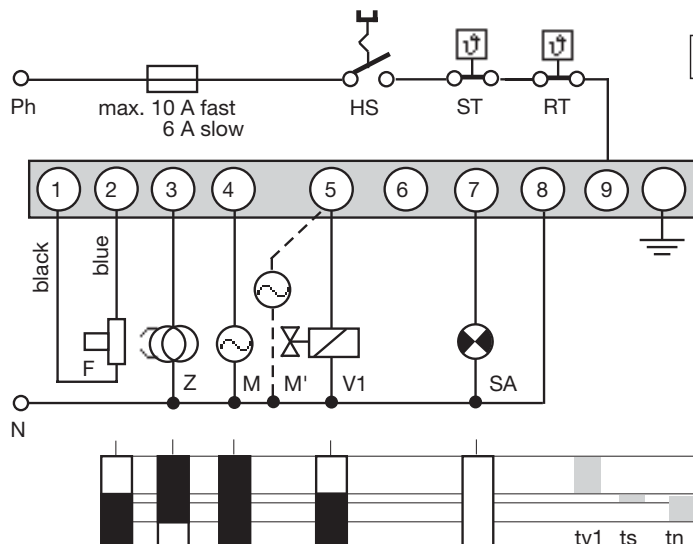


IRD-OR UVD CONNECTION




- | | |
|-----|---|
| HS | Mains switch |
| ST | Limit thermostat |
| RT | Control thermostat |
| F | Flame detector MZ 770 S
(IRD 1010.1, UVD 970 see separate diagram) |
| Z | Ignition |
| M | Burner motor
(burner with solenoid valve) |
| M' | Burner motor
(burner without solenoid valve) |
| V1 | Oil solenoid valve, 1st-stage |
| SA | External lock-out signal |
| tv1 | Pre-ignition time with or without pre-purge |
| ts | Lock-out safety time |
| tn | Post-ignition time |

CIRCUIT AND TIMING DIAGRAM 832.3

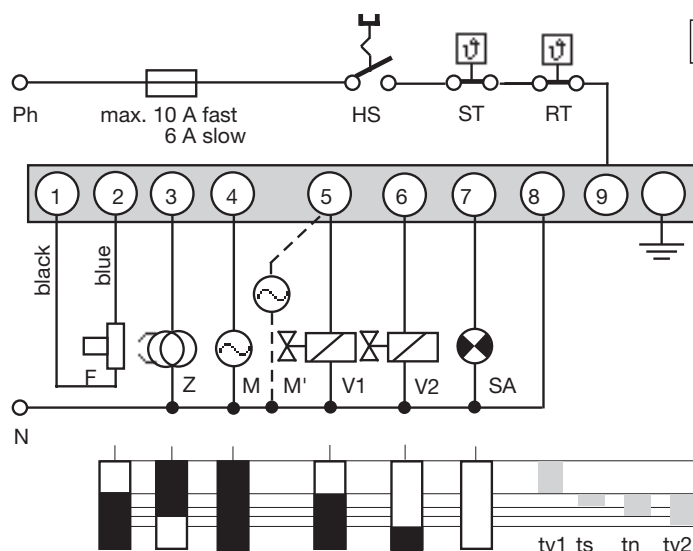


IRD-OR UVD CONNECTION




- | | |
|-----|---|
| HS | Mains switch |
| ST | Limit thermostat |
| RT | Control thermostat |
| F | Flame detector MZ 770 S
(IRD 1010.1, UVD 970 see separate diagram) |
| Z | Ignition |
| M | Burner motor
(burner with solenoid valve) |
| M' | Burner motor
(burner without solenoid valve) |
| V1 | Oil solenoid valve, 1st-stage |
| V2 | Oil solenoid valve, 2nd stage |
| SA | External lock-out signal |
| tv1 | Pre-ignition time with or without pre-purge |
| ts | Lock-out safety time |
| tn | Post-ignition time |
| tv2 | Delay 2nd stage |

SCHEMATIC DIAGRAM TF 830.3

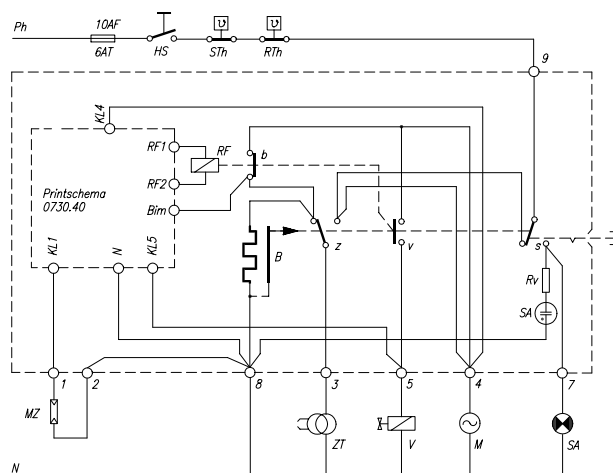

SCHEMATIC DIAGRAM TF 832.3

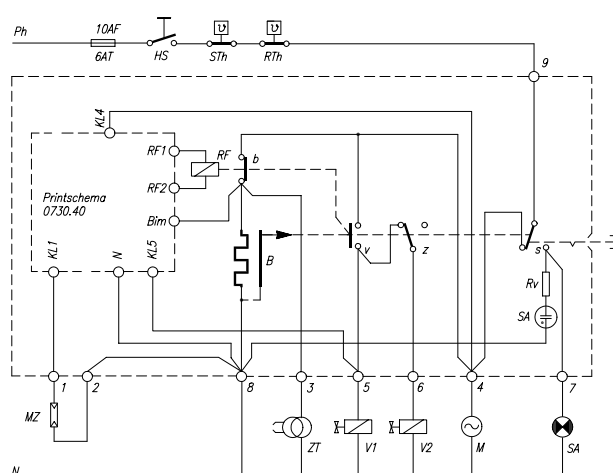


- | | |
|----|---------------------------|
| HS | Mains switch |
| ST | Limit thermostat |
| RT | Control thermostat |
| SA | Lock-out signal indicator |


- | | |
|---|--|
| F | Flame detector MZ 770 S, IRD 1010.1 or UVD 970 |
| V | Valves |
| Z | Ignition |
| M | Burner motor |

- | | |
|----|------------------------|
| RF | Flame relay |
| rl | low voltage relay |
| B | Thermomechanical timer |
| RV | Resistor |


TF 83X AND SOCKET

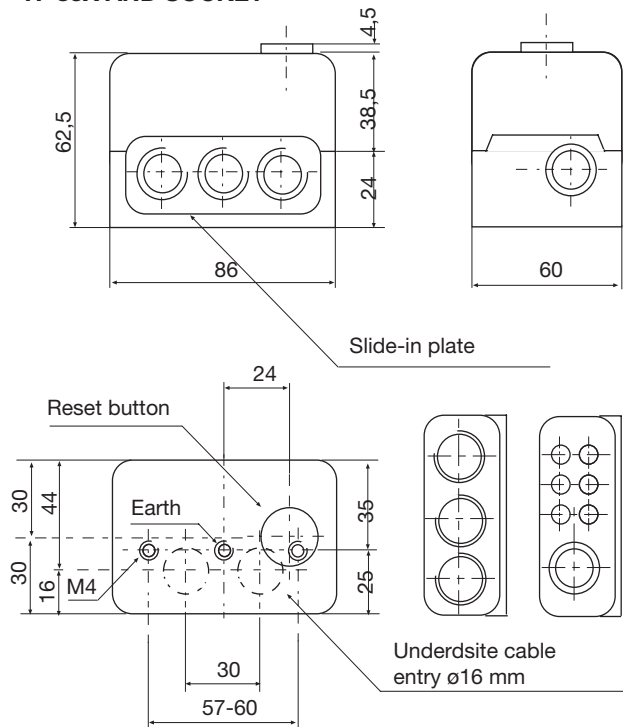


HOLDER MZ 770 S

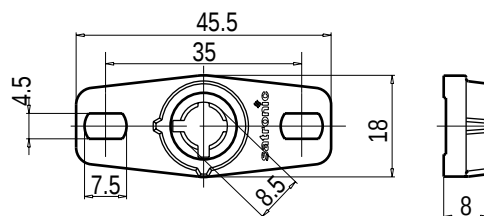


SHAFT MZ 770 S

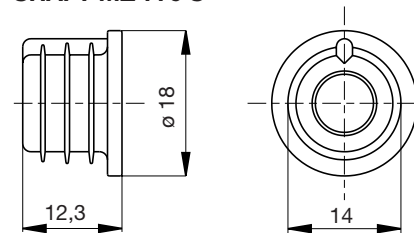


PHOTORESISTOR MZ 770 S

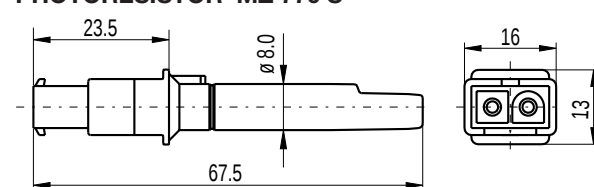

UVD 970

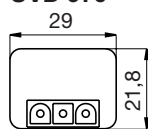


IRD 1010.1

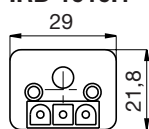

UVD = 29


IRD = 44

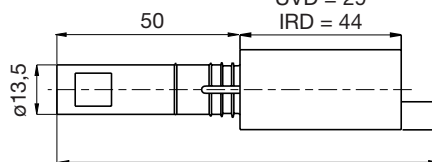


UVD = 89

IRD = 104

HOLDER M 74 FOR IRD OR UVD

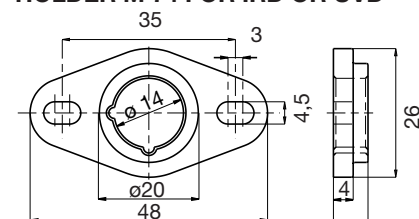

VARIATION IRD

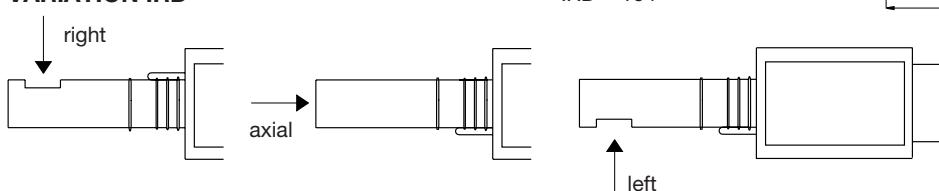

ORDERING INFORMATION

ITEM

Control box
Control box
Socket
Insert plate
optional
Flame detector
optional
optional
optional
optional
optional
Support for flame detector
optional
Connectioncable IRD/UVD
Connectioncable MZ

DESIGNATION

Type TF 830.3
Type TF 832.3
Wiring base S98 9-pin
PG-Plate
Cable entry plate
MZ 770 S
MZ 770 S mounted in shaft
IRD 1010.1 right
IRD 1010.1end-on
IRD 1010.1 left
UVD 970
Holder for MZ
Holder M 74 for IRD, UVD
Plug type, 3 core cable, 0.6 m, with tag wire ends
Plug type, 2 core cable, 0.5 m, with tag wire ends

ITEM NO.

02231
02431
75300
70502
70503
50001
51001
16501
16502
16503
16702
59101
59074
7236001
7225001

The above ordering information refers to the standard version.
Special versions are also included in our product range.

Specifications subject to change without notice

TF 830.3 / 832.3

satronic

A Honeywell Company

Satronic AG
Honeywell-Platz 1
Postfach 324
CH-8157 Dielsdorf